

# 3DActive alarmee | USER GUIDE

## PACKAGE CONTENTS

1 x 3DActive alarmee  
1 x User Guide  
1 x Carabiner  
1 x USB-C Charging Cable

**If any contents are missing or damaged, please contact us below.**

## FEATURES


Alarm volume ~ 130 decibels (dB)  
Alarm duration ~ 70 minutes  
Lighting time ~ 240 minutes  
Flashing time ~ 300 minutes  
Charging time ~ 60 minutes

## ! CHARGE BEFORE FIRST USE

Charge fully before first use.


## HOW TO CHARGE

Insert USB-C cable into charging port. Charging light turns red when charging and green when fully charged.

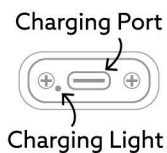

## HOW TO TURN ON THE LIGHT

Press light button. 1 press turns on continuous light. 2 presses flashes light. 3 presses turns off light.



## NEED HELP? | CONTACT US

### SUPPORT CENTER

[www.3dactive.com/support](http://www.3dactive.com/support)

### EMAIL US

[support@3dactive.com](mailto:support@3dactive.com)

### CALL US

(US) +1 (855) 789 9777 | Mon-Fri 9am-5pm (Pacific Time)

(UK) +44 808 178 4009 | Mon-Fri 4pm-12am (GMT)

3DACTIVE.COM




@3dactive




@3dactiveofficial

## LAYOUT

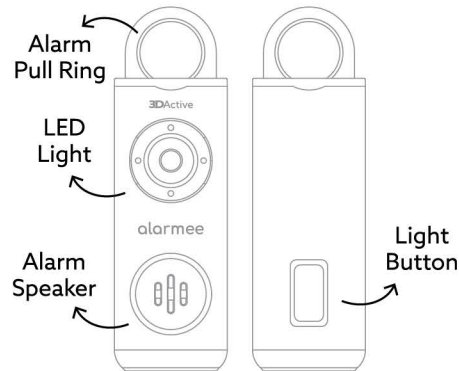


## HOW TO ACTIVATE THE ALARM

Pull out removable alarm pull ring. Alarm will emit a loud 130dB sound and LED light will flash.



## HOW TO STOP THE ALARM

Replace alarm pull ring into device.



## LOW BATTERY WARNING

LED light turns on and off 3 times.

## IMPORTANT SAFETY INFORMATION

To assure the correct use of the product, basic safety measures should always be followed including the warnings and cautions listed in this user guide.

- ⚠ Keep the unit out of reach of young children. The unit contains small pieces that may be swallowed. Immediately contact your physician if any piece is swallowed.
- ⚠ If battery fluid gets in your eyes, immediately rinse with plenty of clean water. Contact a physician immediately.
- ⚠ An audible personal alarm should not be expected to provide a complete safeguard against assault. 3DActive is not liable for your personal safety.
- ⚠ Prolonged exposure to alarm sound may cause permanent hearing loss.
- ⚠ Prolonged exposure to strobe light may cause permanent eye sight loss.
- ⚠ If battery fluid gets on your skin or clothing, immediately rinse with plenty of water.
- ⚠ Do not throw the unit into fire. The battery may explode.
- ⚠ Dispose of the device, battery and components according to applicable local regulations. Unlawful disposal may cause environmental pollution.

## CARE AND MAINTENANCE

- ⚠ Do not disassemble or modify the unit. Changes or modifications not approved by 3DActive will void the user warranty.
- ⚠ Do not subject the unit to strong shocks, such as dropping the unit on the ground.
- ⚠ Do not submerge the unit or any of the components in water.

### ♻ Disposal of Waste Batteries

This symbol indicates that if this product contains batteries, do not dispose of them with other household waste. Instead hand it over to the appropriate collection point for recycling. These batteries do not contain Mercury, Cadmium or Lead above the levels defined by the battery directive 2006/66/EC.

### ♻ Disposal of Electrical Equipment

This symbol indicates that this product should not be treated as household waste. Ensuring proper product and battery disposal prevents potential negative consequences for the environment and human health, which may be caused by inappropriate handling. Hand the product over to the appropriate collection point for the recycling of electrical equipment. For more information about collection points and opening hours, please contact your municipality.

### FCC FCC Marking

FCC is a marking that indicates the product has been tested and found compliance with the requirement of 47 CFR of PART 15 limit for radiation and conduction emission.

### CE CE Marking

CE is a marking that indicates the product meets the health and safety requirements and environmental protection standards for products sold within the European Economic Area.

### UK CA UKCA Marking

UKCA is a marking that indicates conformity with the applicable requirements for products sold within Great Britain.

3DACTIVE.COM

Goldhat Limited | 60 Windsor Avenue,  
London, SW19 2RR, UK

